


# R90WWR/BCR Installation instructions

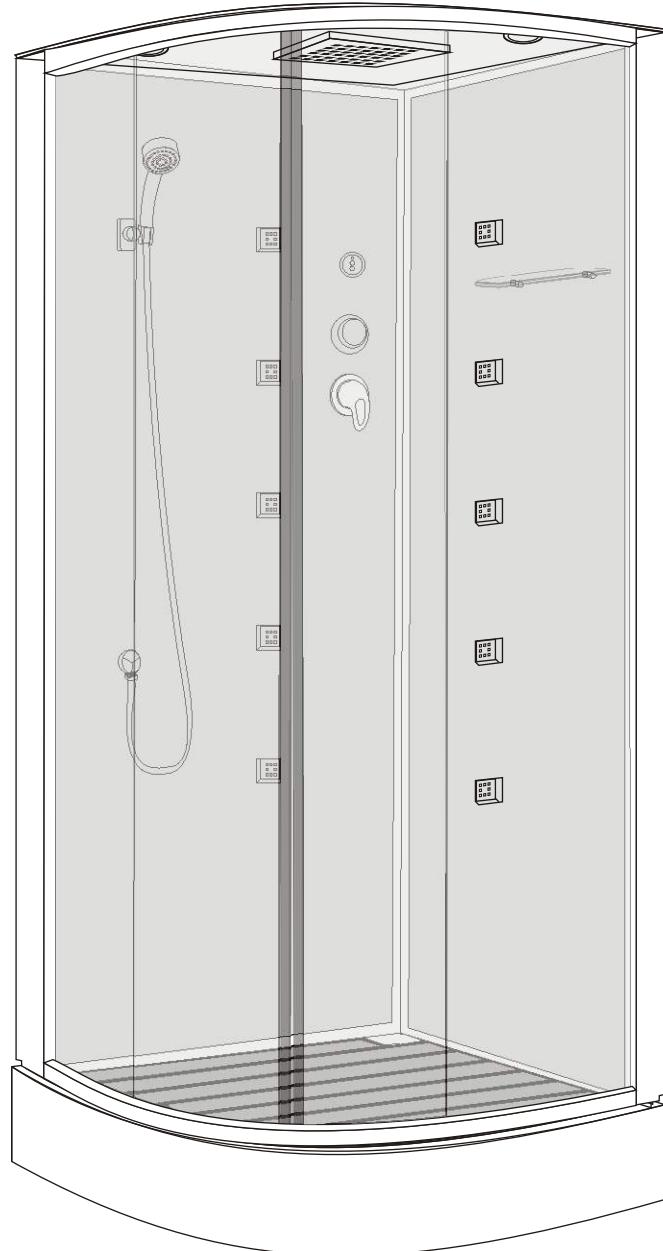


**SIZE : 90\*90\*210 CM**

# R90WWR/BCR Installation instructions


## TOOLS REQUIRED(NOT SUPPLIED)

when you're ready to start, make sure that you have the following tools to hand, plenty of space and a clean dry area for assembly.


Two people are needed. Please note: although these instructions are comprehensive, we always recommend that a technically competent installer should undertake installation.

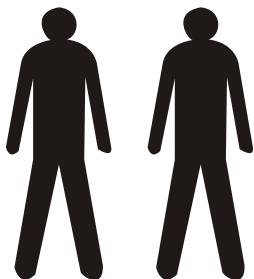


Drill beat head  
4mm

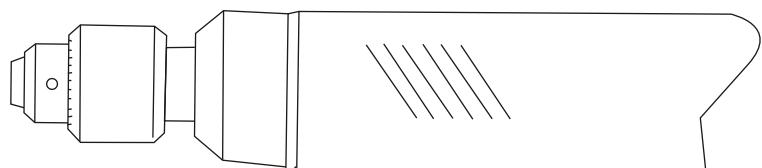


Sanitary Silicone

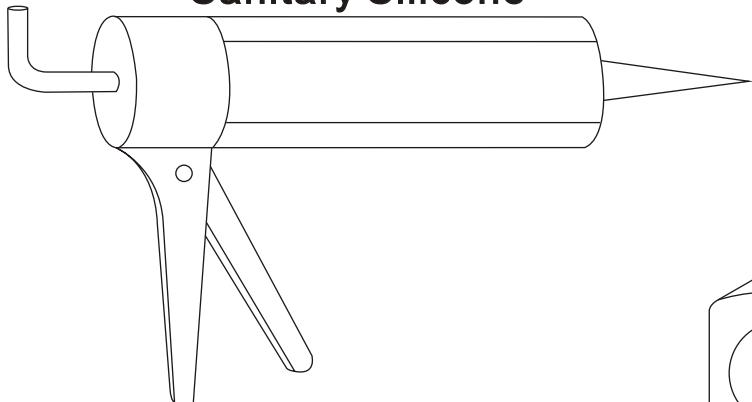


Auger

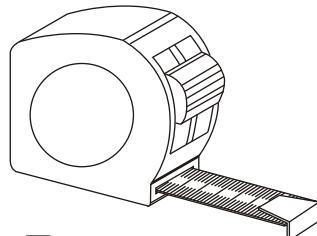

Tape measure

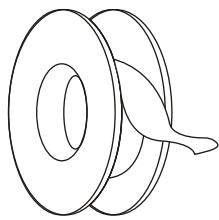


PTFE tape



Magnetic crosshead screwdriver





Pencil



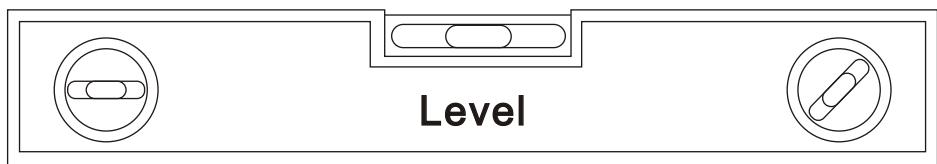


Level


# R90WWR/BCR Installation instructions

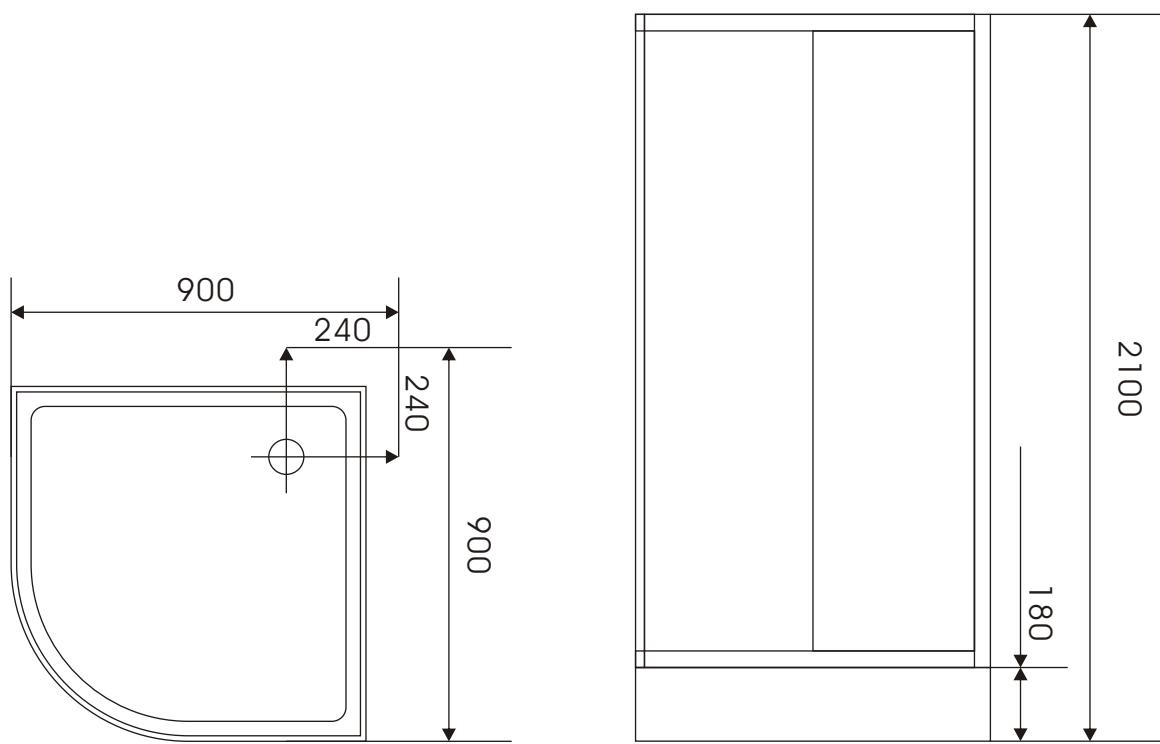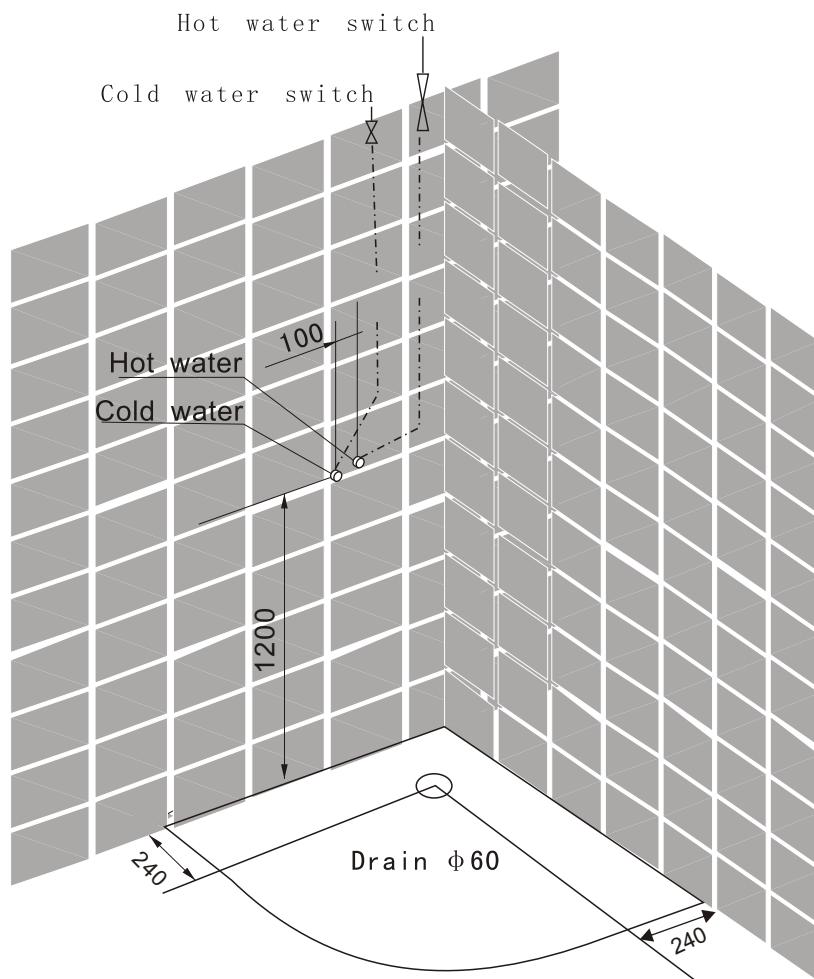



# R90WWR/BCR Installation instructions

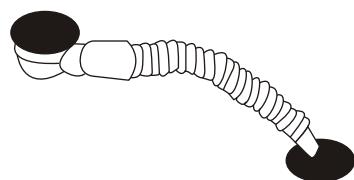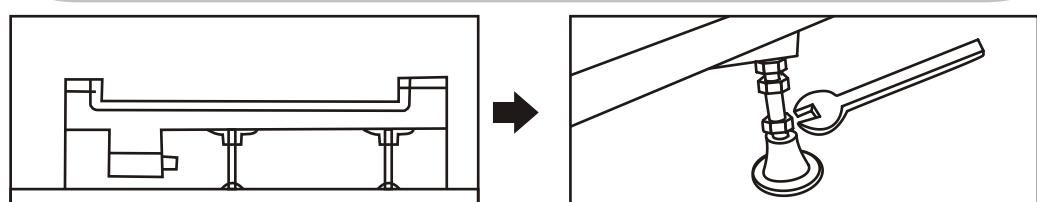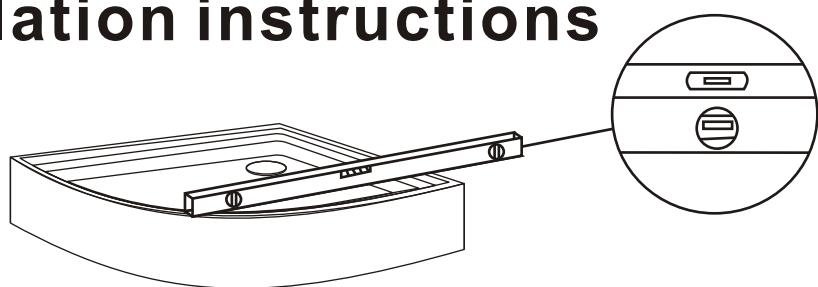


Lift the rear part of bottom basin, and then insert one end of the pipe into the drainage hole

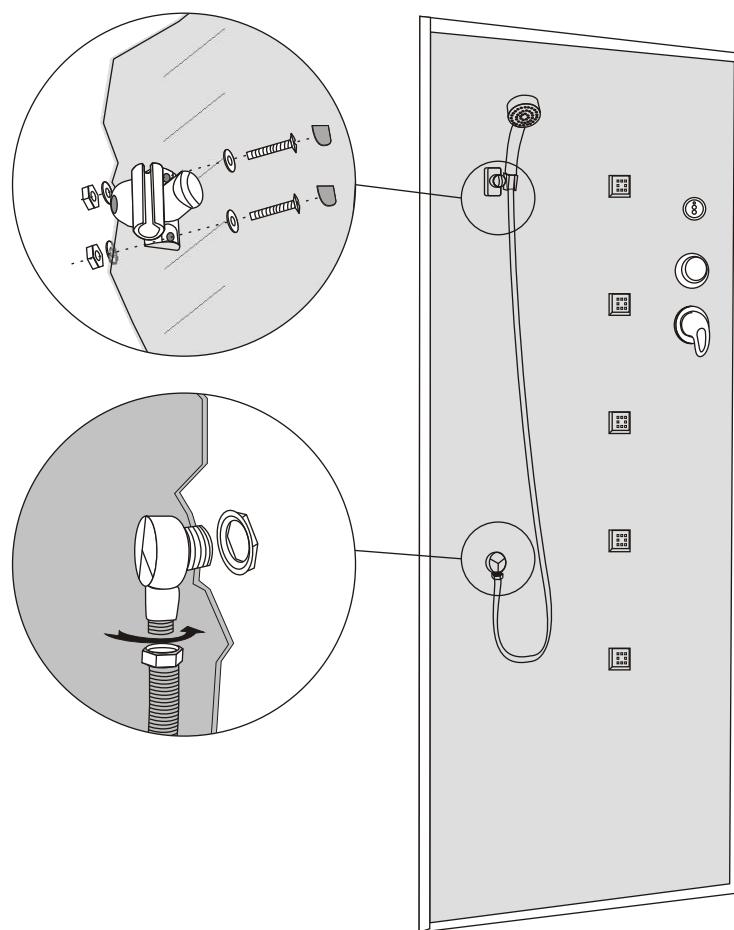



# R90WWR/BCR Installation instructions

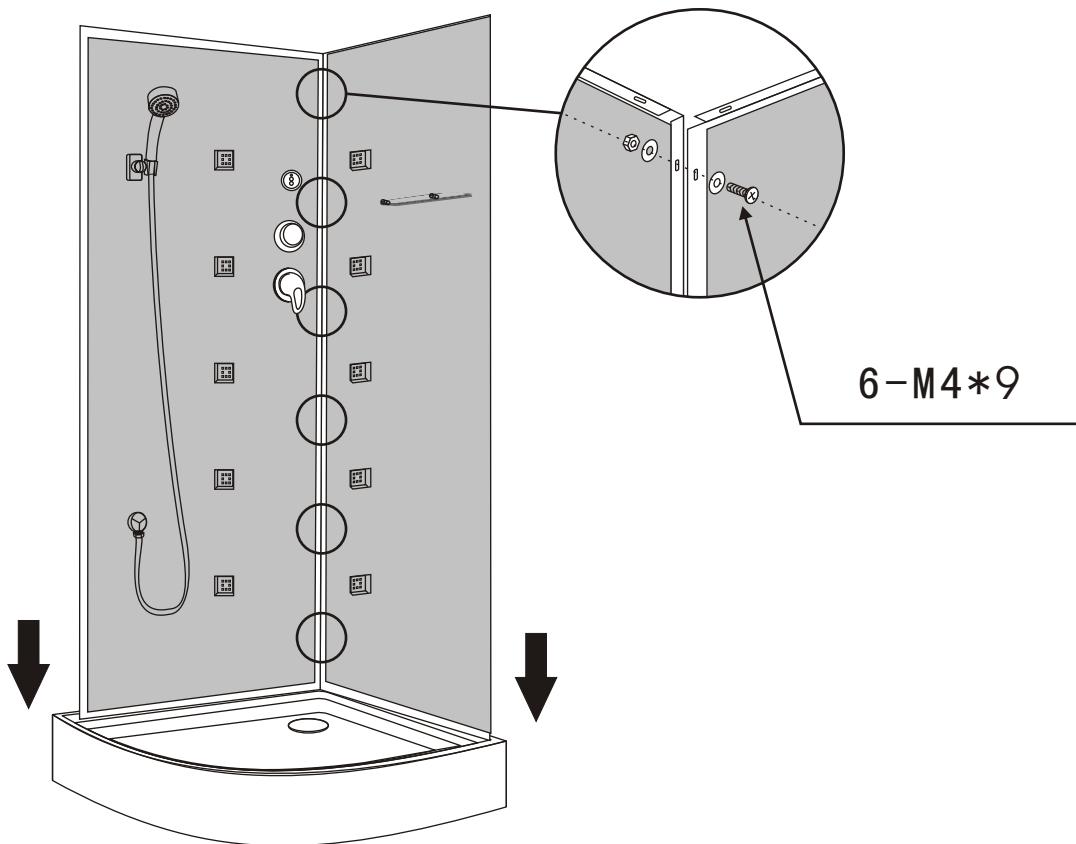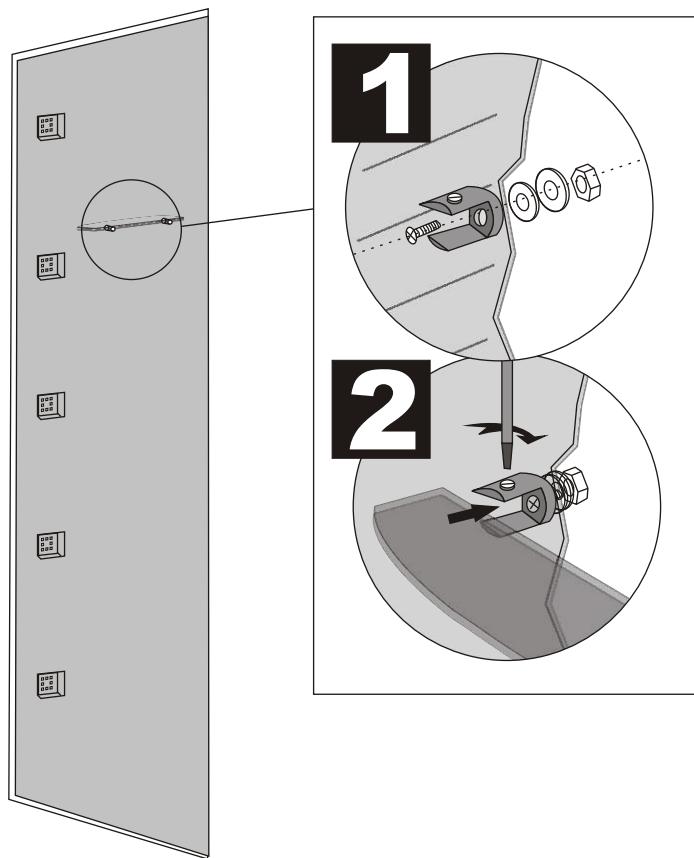



# R90WWR/BCR Installation instructions

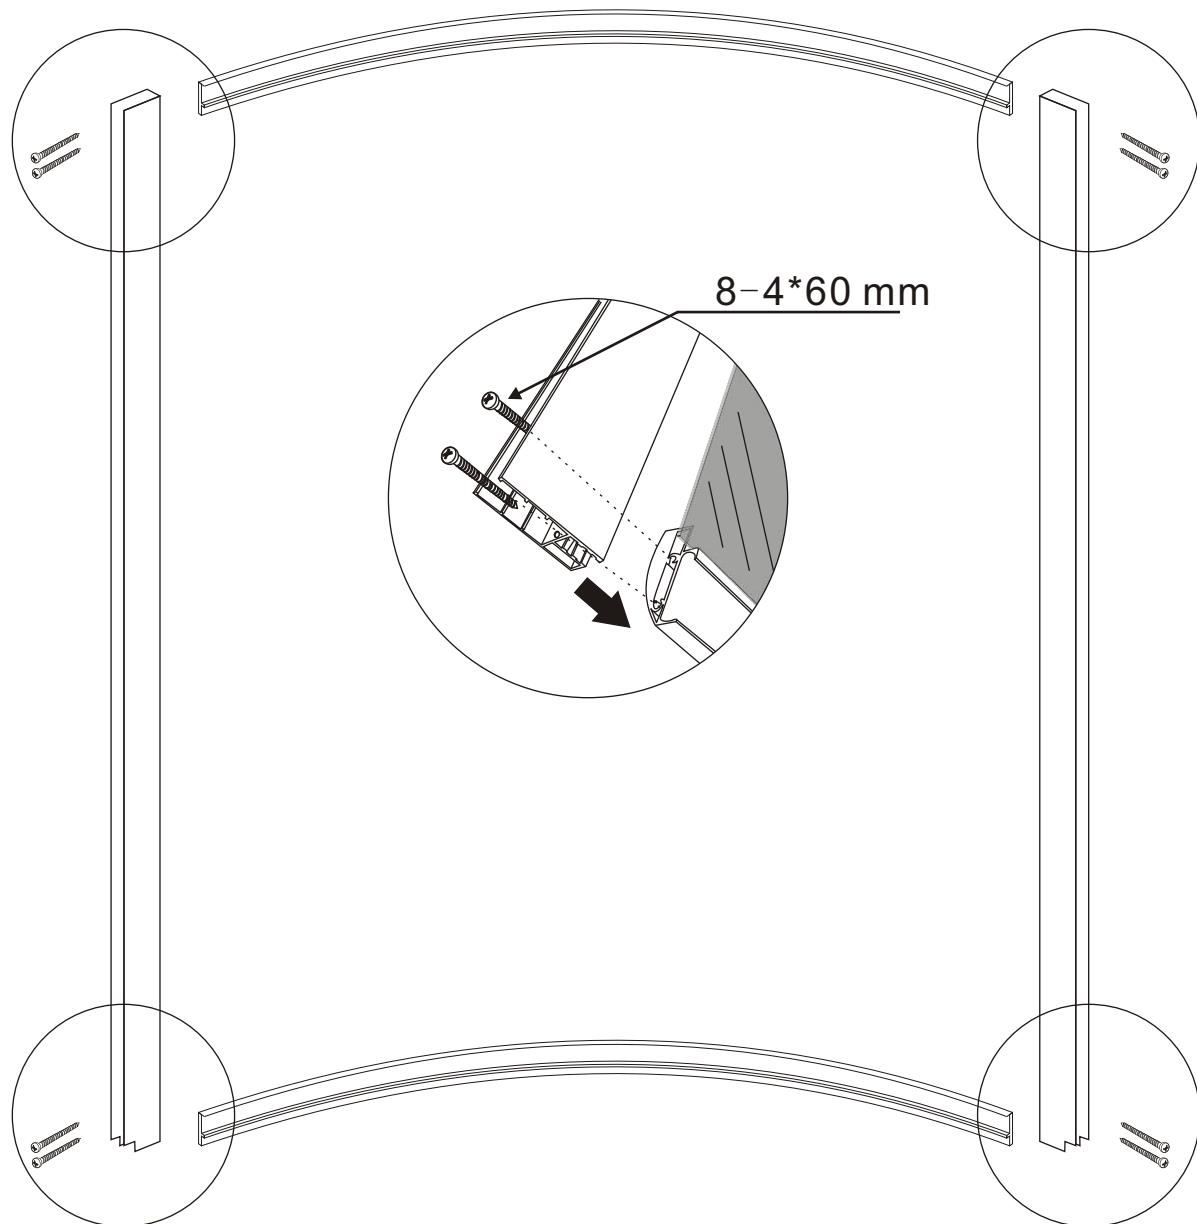




# R90WWR/BCR Installation instructions

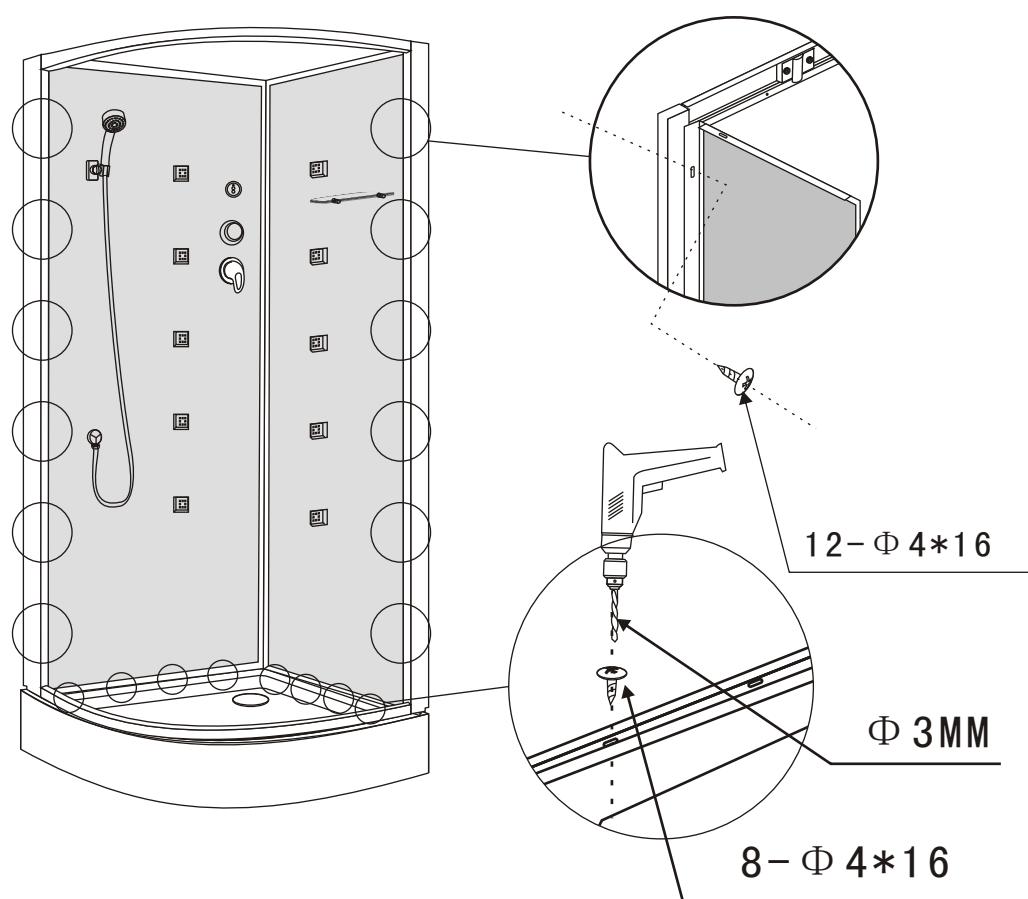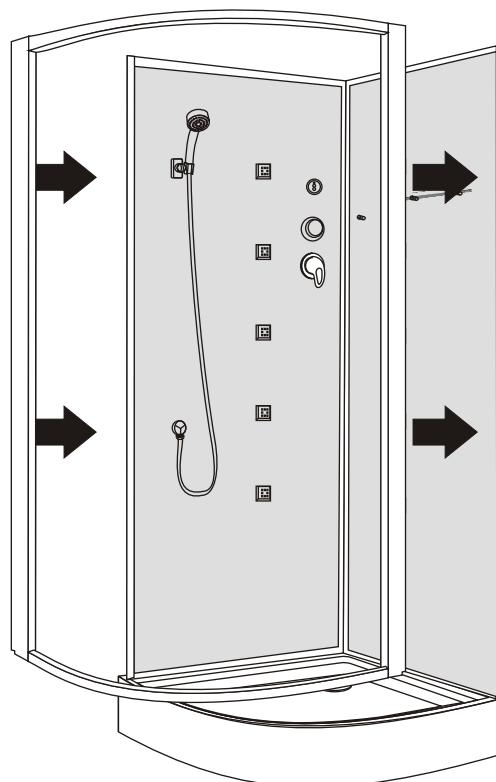










# R90WWR/BCR Installation instructions

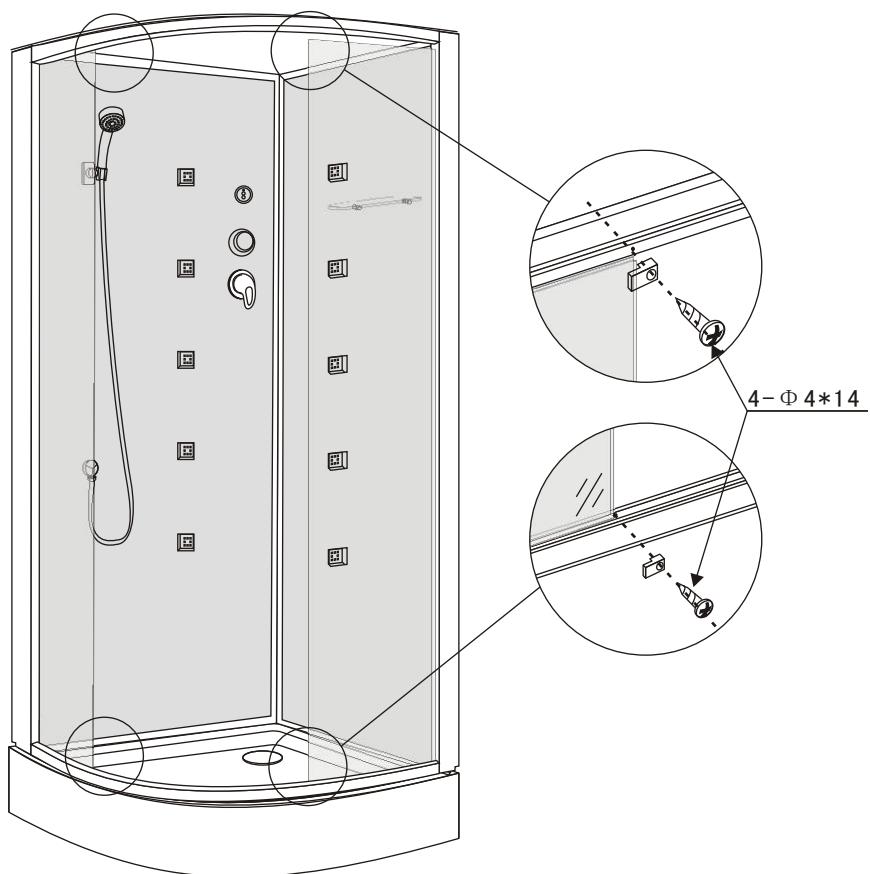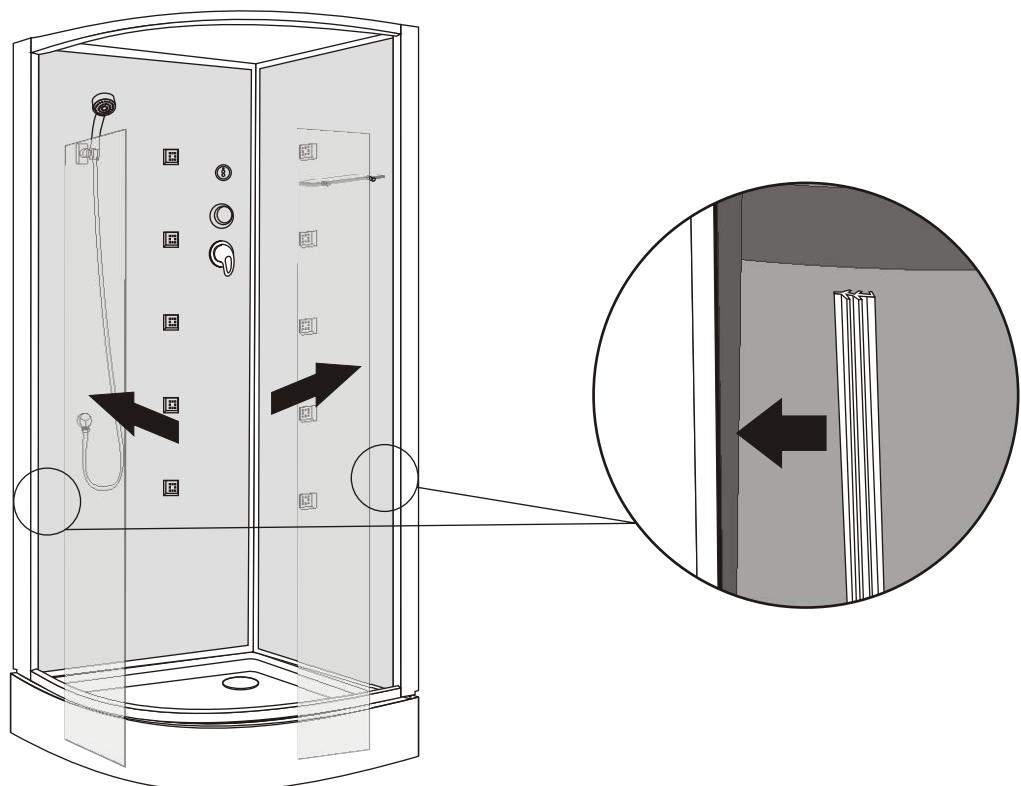

# R90WWR/BCR Installation instructions

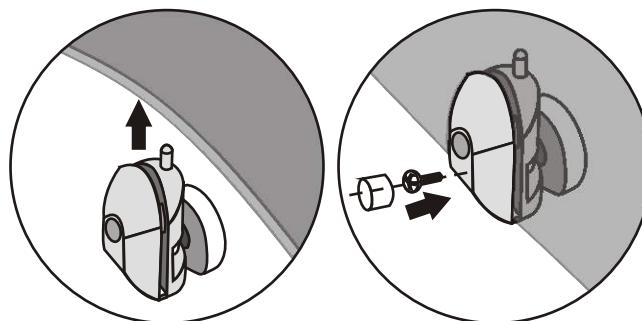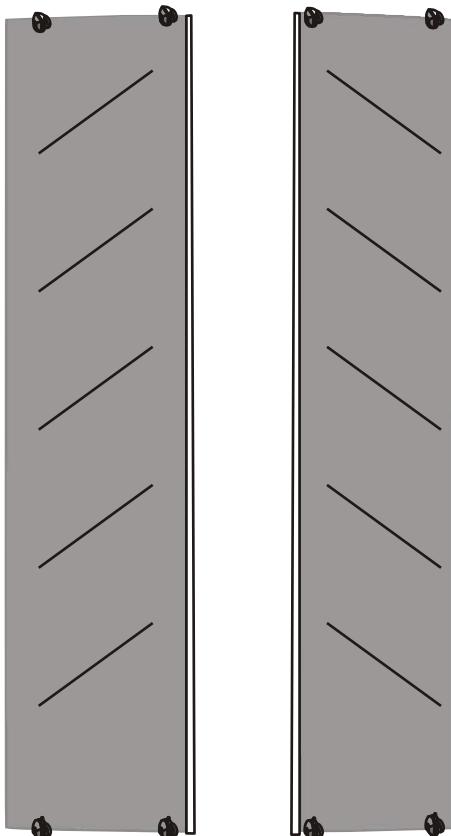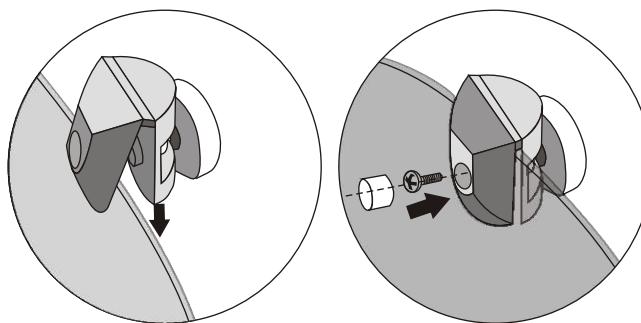


# R90WWR/BCR Installation instructions

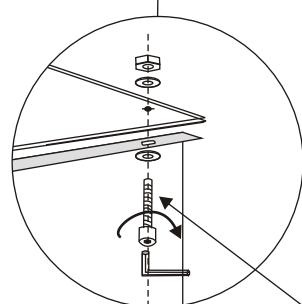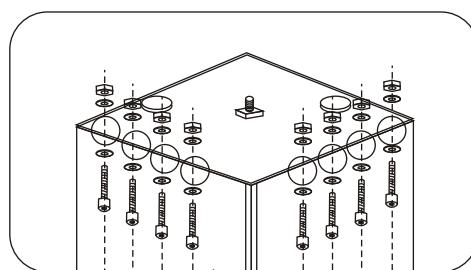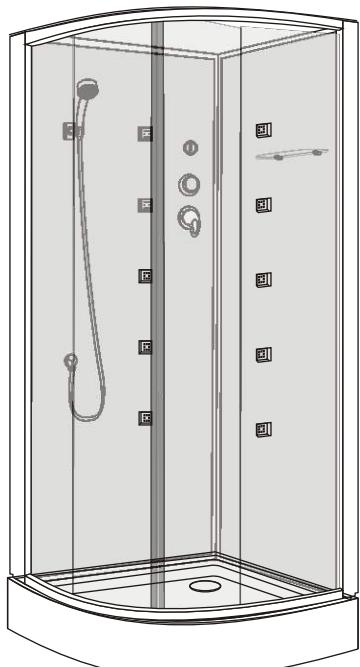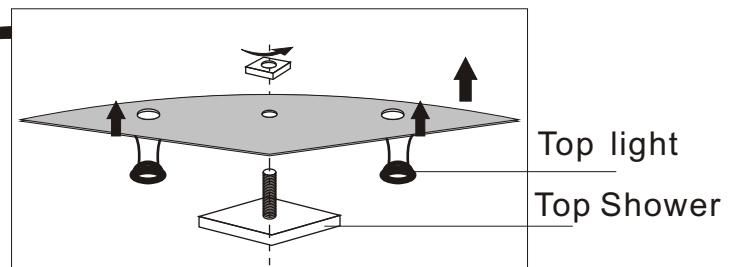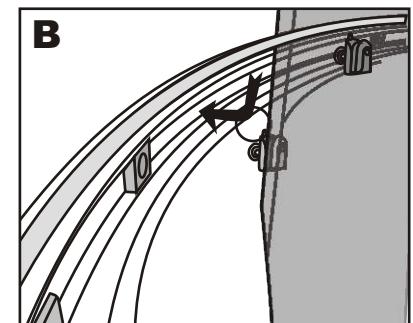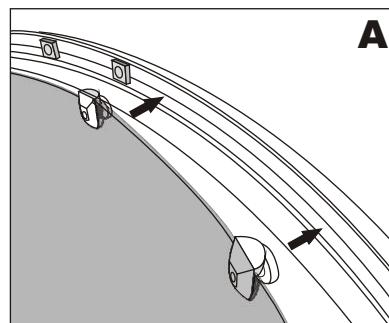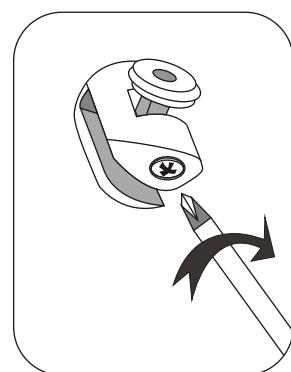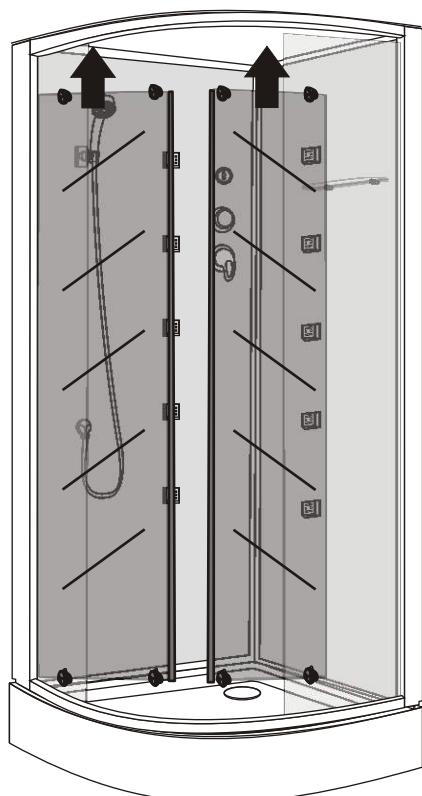

M4x16mm

# R90WWR/BCR Installation instructions

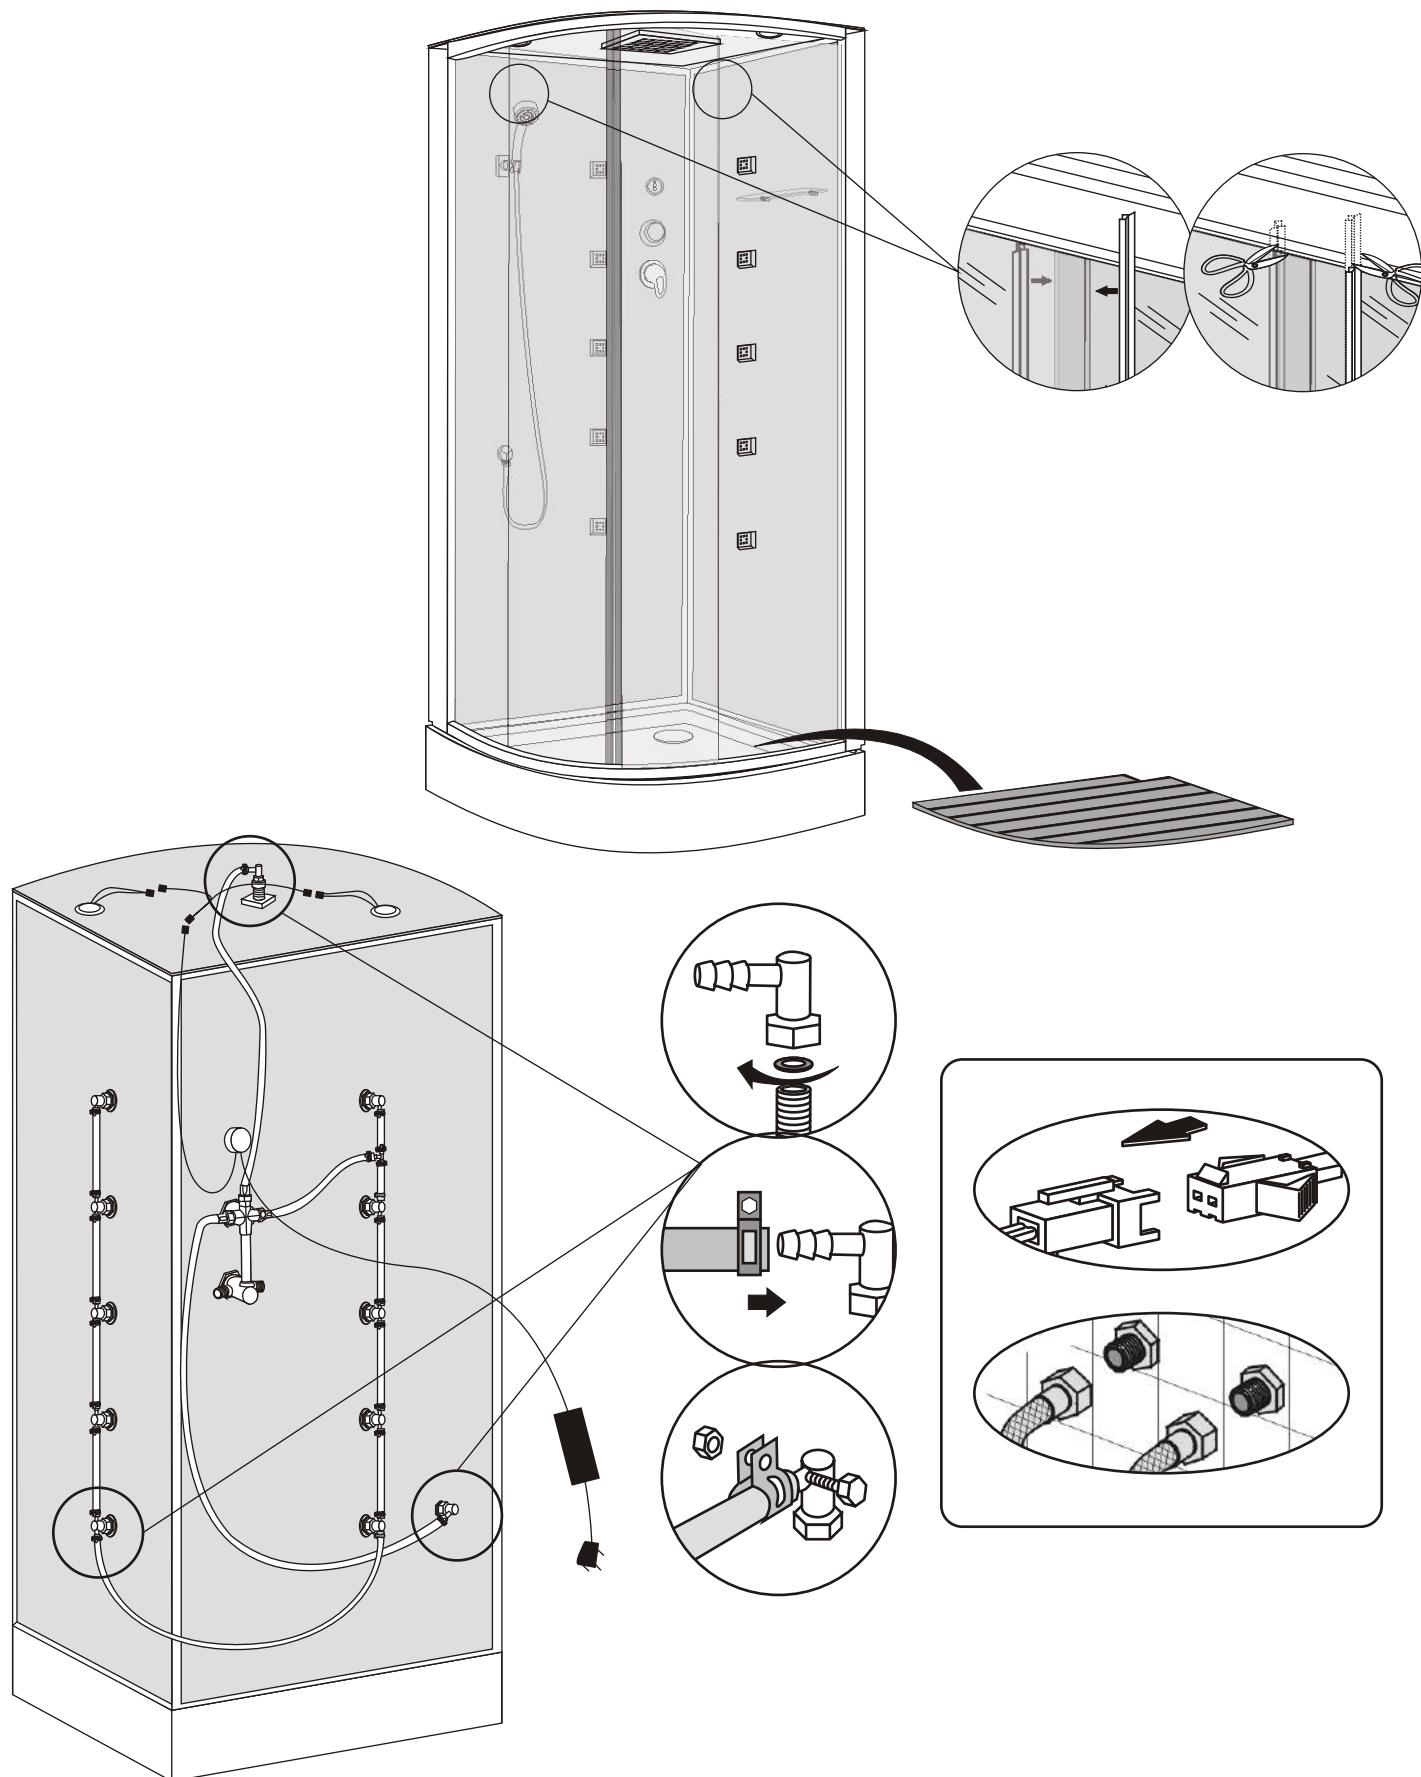

connect the electrical wire of bunglea,power and etc.correctly,connect the hose of head shower,hot water hose and cold water hose correctly,put the antenna to the top.

# R90WWR/BCR Installation instructions



Warning: Don't use the shower enclosure until after at least 24 hours, so that the silica gel can be totally dry.